


CRUX

QUICK REFERENCE GUIDE

LED Display with Touchscreen Digital Controls

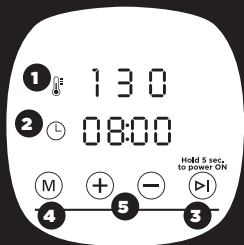

1. **TEMPERATURE ICON / TEMPERATURE DISPLAY (FAHRENHEIT).**
2. **TIME ICON / TIME DISPLAY.**
3. **START/STOP Button.**
4. **MODE (M) Button.**
5. **(+) or (-) Buttons.**

Action:	Solution:
To switch ON and turn OFF the unit	When plugged in, the START/STOP button will flash. Press and hold for 5 seconds to turn on the unit. To turn off the unit at any time during operation press and hold the same button to switch off the unit.
To switch temperature display between Fahrenheit and Celsius	The default temperature display is in degree Fahrenheit. To switch to Celsius press and hold the M button for 5 seconds before the unit starts pre-heating.
E1/E4 error on screen	Water level is below MIN mark. Unplug the cooker, add water past the MIN water level mark and restart operation.

For Tips and Recipes Visit:
cruxkitchen.com
 [crux.kitchen](https://www.instagram.com/crux.kitchen)